

KIT LED sans fil

réf. 929580


Mise en route du système

Avant de pouvoir utiliser normalement la signalisation sans fil, vous devez activer les feux individuellement.

1. Assurez-vous de charger les batteries des feux à l'aide du cordon double USB, si besoin avec l'adaptateur allume-cigare fourni.
2. Sur un véhicule avec une prise de remorque, placer correctement l'émetteur dans la prise.
3. Allumer le contact et démarrer le moteur du véhicule en appuyant sur la pédale de frein. Dans le même temps, allumer l'interrupteur blanc du premier feu et maintenir le bouton enfoncé jusqu'à ce que les LED de couleur jaune clignotent 3 fois.
4. Faites la même chose pour l'autre feu en répétant la procédure.



• Contents

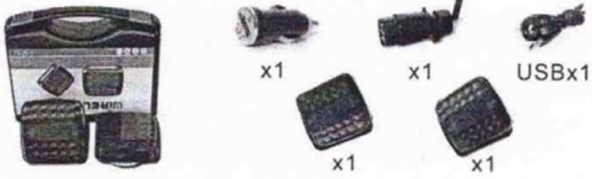


• Charging


5V2.5Hours



• Installation

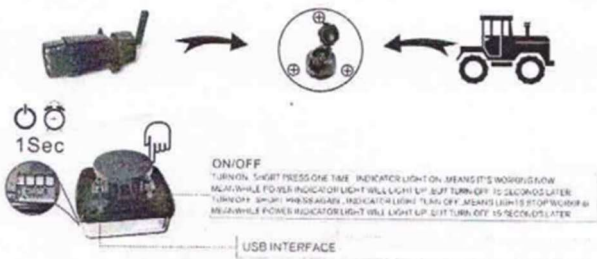

• Mounting

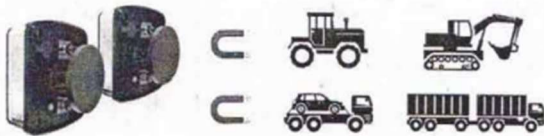


• Battery Life




The data of endurance of battery is for your reference, the it depends on the road condition and driving habit

• Specification


Input voltage	DC5V
Working Frequency	2.4G
Radio communication range	30Meters
Battery capacity	2000MAH
Charging time	2-2.5hours
Waterproof level	IP65
Operating temperature	-25°C+50°C

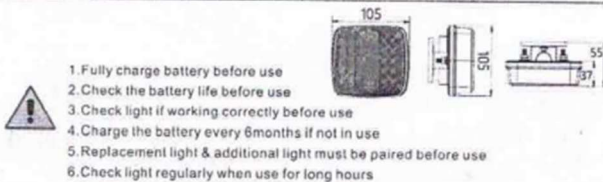


3Sec

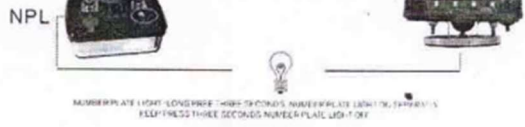

• Pairing

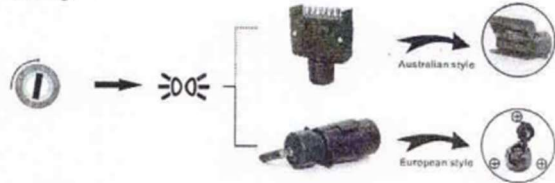

• Testing

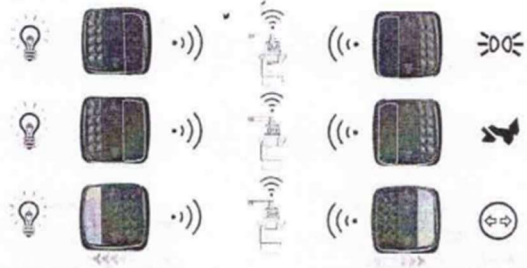

Wireless Trailer Light kit

100% Cable-free Solution

